



# VERMEC

## 65mm Router Holder Code: WSE-136

### FINE ADJUSTMENT

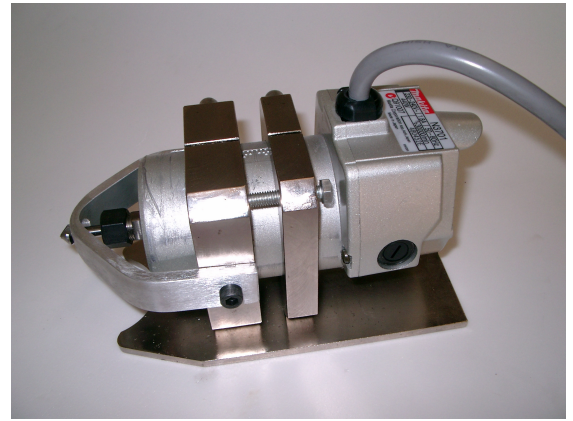

**Step 1: To use the fine adjustment undo the front bracket top screw as shown**

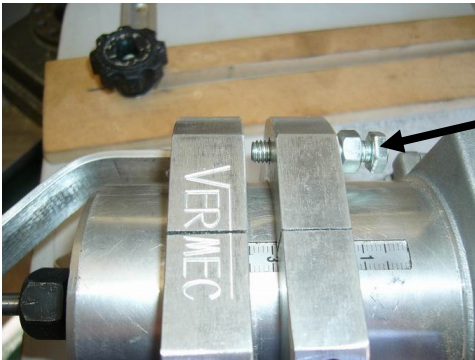

**Step 2: Move the fine adjustment screw back or forward into required position.**



**Step 3: Make sure both brackets are pushed together.**



**Step 4: Tighten the front bracket top screw. Lock the nut on the fine adjustment screw.**